

QUICK INSTALLATION MANUAL FOR INSTALLING 2G HOSES ON FLEXI 1G AND DESIGN LINE CERAMICS

AUTHOR:
MICHELE DEL VISCIO
DATE: 08/02/2019


STEP 1. Install the Siphon hose on the ceramic discharge and tight the clamp

Be sure the hose has been completely inserted into the ceramic



STEP 2. Fix the pump bracket on the ceramic

The pump will be inclined because the 2G hoses are shorter than 1G hoses

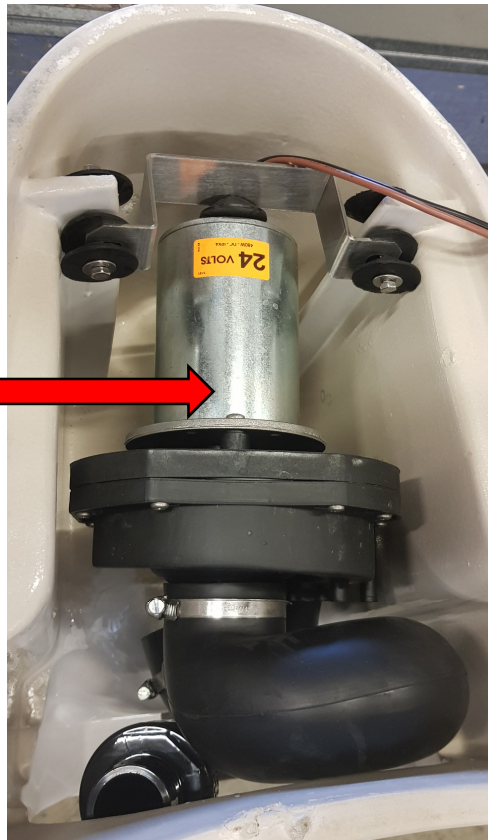

STEP 3. Place the discharge hose

The discharge hose has to be placed under the nozzle.



After installing the discharge pipe, be sure it does not pull down the toilet discharge hose.