


ACTUATOR

Part Name	Part #	Part Name	Part #
1. Upper Hinge with O-Ring. 00190720	A1103	11. 1/4-20 x 3/4" Machine Screw	H1175
2. #14 x 1-1/2" Screw	H1174	12. Lower Hinge. 00190725	A1113
3. -224 O-Ring 00190722	A1120	13. Trim Plane	Varies With Model
4. Spacer	Only Available With Upper Hinge	14. #10 x 1-1/4" Screw	EH1071
5. -220 O-Ring 00190721	A1121	15. Hinge Plate	Varies With Model
6. Actuator Spring	Varies With Model	16. Backing Plate	Varies With Model
7. Cylinder	A1105	17. Brass Pipe Nipple. 1190709	H1171
8. Sleeve	Varies With Model	18. Female Elbow. 00190712	H1172
9. Piston With O-Ring	A1109	19. Nut w/ferrule. 00190745	T1127
10. Pin. 00190806	A1115	20. Tubing. 00190713	T1125



BENNETT MARINE • 550 Jim Moran Blvd • Deerfield Beach, FL 33442 • USA
Phone: +1.954.427.1400 • Fax: +1.954.480.2897 • www.BennettTrimTabs.com

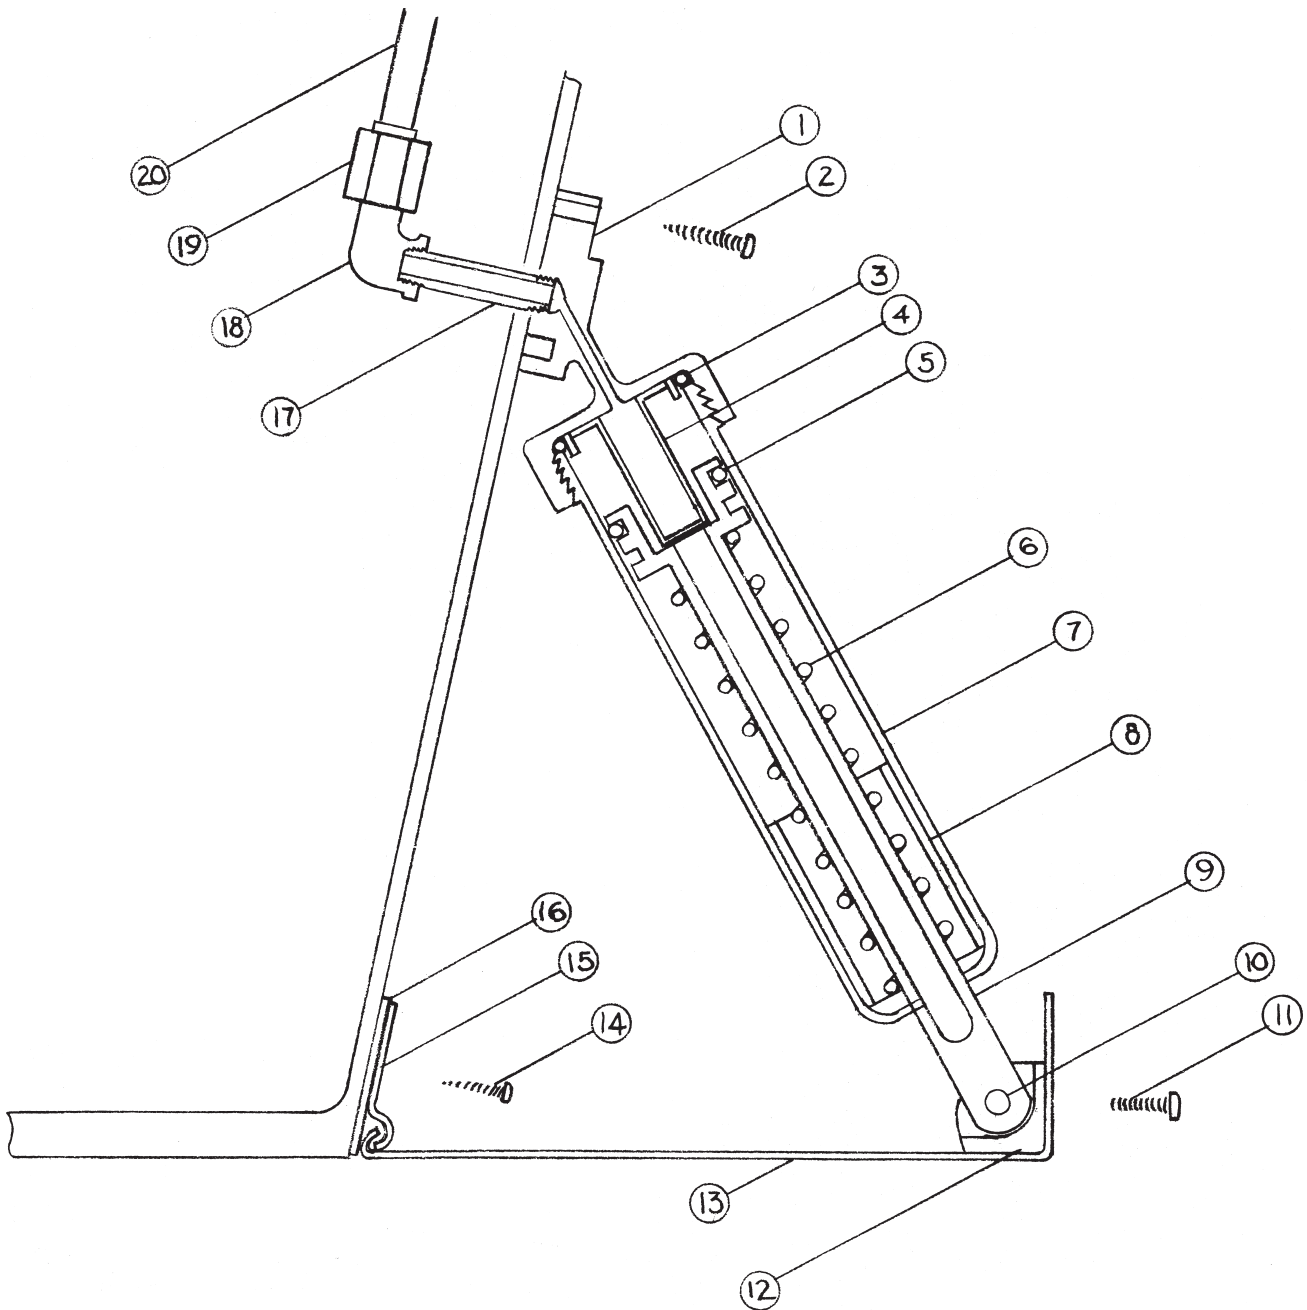

NON-STANDARD INSTALLATION OPTIONS


External Line Connection Actuator:

One of the unique features of the Bennett Trim Tab system is the use of concealed through-transom hydraulics. However, there are cases of complete inaccessibility inside the transom making the use of the standard Bennett actuator difficult. For such instances, the Bennett actuator is available with an external line connection. The special actuator avoids the accessibility problem by allowing the hydraulics to enter the transom at a location where there is no obstruction.

The hydraulic tubing connects directly to the upper hinge of the actuator and is fed through the transom above the waterline. A chrome "clamshell" is included with each actuator to cover the hole in the transom.

The external line connection actuator is recommended only when necessary.

Part Number: A1101EX

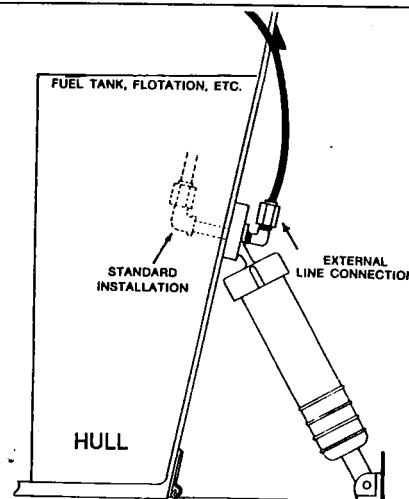


Reduced Actuator:

The "Reduced Actuator" is used in applications where a slightly shorter than standard actuator is desired. It is one inch shorter than the standard A1101 A actuator so it may be installed lower on the transom. Actuator stroke is same as standard at 2-1/2" unless otherwise specified.

Part Number: SA2118A

(SA2118EX for external line connection)

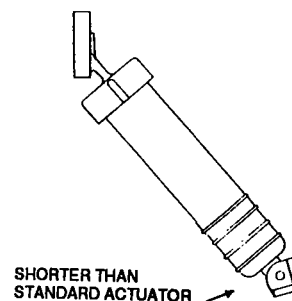


Small Actuator:

The "Small Actuator" is a scaled-down version of our standard A1101A actuator. It is made for short transom applications or where standard actuator height makes installation difficult. The "small actuator" length is 2" shorter than the standard A1101A. THE "SMALL ACTUATOR" IS GENERALLY NOT RECOMMENDED FOR USE ON TABS OVER 24" IN SPAN, OR FOR PERFORMANCE APPLICATIONS. The "small actuator" is designated by 3 rings around the base of the cylinder body.

Part Number: A1200S

(A1200EX for external line)

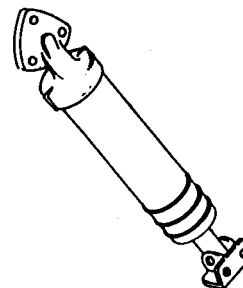


There is no extra charge for any of the three actuators above, they are the same cost as the standard A1101A. Special Trimindicator or Tab Gauge indicator kits are required for compatibility with the above actuators.

Short through-transom fitting:

For boats with limited space inside the transom, a shorter hydraulic connection is available in lieu of the standard pipe nipple and elbow. This short fitting allows the tubing to be connected to the actuator outside the boat. The tubing can then be fed through the transom and pulled from the inside. Standard pipe nipple and female elbow are not used.

Part Number for fitting (used on any actuator except external line): VP1146
(one per actuator)

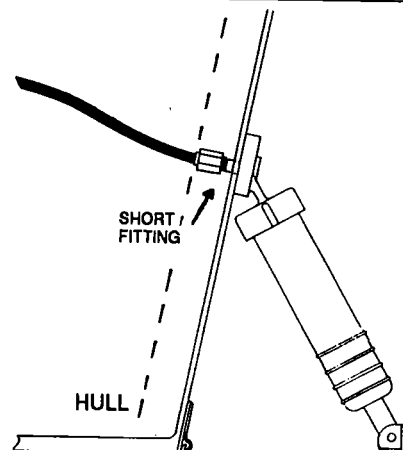

Alternate length pipe nipples: Lengths of 2-1/2", 4" and 5" are available.
(Standard pipe nipple length is 3".)

Bennett Marine

550 N.W. 12th Avenue • Deerfield Beach, FL 33442
Phone: (305) 427-1400 • Fax: (305) 480-2897

#32-11/94